



XP-BLYFF System Installation

Flicker Free Installation

- Installation Time: About 10 Minutes
 - Tools Required: NONE
1. Unplug the AC power from your pinball machine. Remove game back glass.
 2. Unplug connections J1, J2 and J3 from the Lamp driver board in the back box.
 3. Connect the flicker free boards to connection J1, J2, and J3 on the lamp driver board. Each board is labeled with which connector it should go to.
 4. Connect the 3 connectors removed in step 2 to the flicker free boards.
 5. Connect provided wire harness to the flicker free boards.
 6. Connect the alligator clip on the wire harness to the power side of one of the feature lamps on the inside of the back box (game over, ball in play, match, tilt). The power side will be a braided wire stapled to the inside of the door running between each of the feature lamps.
- NOTE: For Mr. and Mrs. Pacman, Centaur II and Eight Ball Deluxe Special Edition, the feature lamps are located with the score displays on the panel below the back box.
7. You are now ready to PLAY PINBALL without your feature lamp LEDs flickering!!

