



XP-3179-S v. 2.1b

Installation

XP-SGHV

- **Installation Time:** About 20 minutes
- **Tools Required:** 1/4" Nut-driver, Phillips screwdriver
- 1. Unplug the AC power from your pinball machine. Remove game backglass. Open back box.
- 2. Remove existing power supply.
- 3. Install provided fuse.
- 4. Install the XP-SGHV into the back box.
- 5. Connect all connectors as indicated.
- 6. Double-check all connections, plug in the machine, and turn the game on. The LEDs will light up
- 7. PLAY PINBALL! You'll enjoy your **XPin™** products for years to come!



.....
EVOLUTION * EVOLVED.
.....

Installation

XPinPinball.com

tech@XPinPinball.com