

v. 2.1b XP-3179-S

Installation


XP-WMS12246

- Installation Time: About 20 minutes

— Tools Required: 1/4" Nut-driver, Phillips screwdriver

- 1. Unplug the AC power from your pinball machine. Remove game backglass. Open back box.
- 2. Remove existing power supply.
- 3. Install provided fuses into appropriate fuse clips as indicated by the fuse listing on the circuit board.
- 4. It is recommended that if you are using XPin™ LED displays, you do not install the 3 High Voltage fuses indicated in the Drawing to the right as they are no longer required. (F1, F2, and F3)
- 5. Install the XP-WMS12246 into the back box.
- 6. Connect all connectors as indicated.
- 7. Double-check all connections, plug in the machine, and turn the game on. The LEDs will light up
- 8. PLAY PINBALL! You'll enjoy your XPin™ products for years to come!

XP-WMS12246

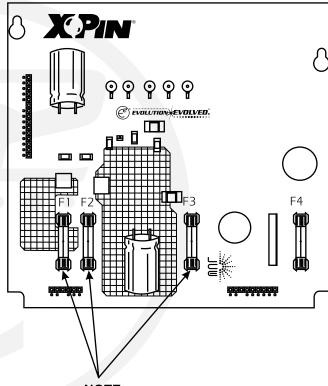

NOTE: Do Not Install F1, F2, and F3 when using in conjunction with **XPin™** Displays.

