



XP-3179-S v. 2.1b

Installation

XP-WMS8345

- **Installation Time:** About 20 minutes
- **Tools Required:** 1/4" Nut-driver, Phillips screwdriver
- 1. Unplug the AC power from your pinball machine. Remove game backglass. Open back box.
- 2. Remove existing power supply.
- 3. Locate the cardholder with the pull-out **Fuse Legend** and install Fuses from the provided fuse kit as indicated for your game title: **WARNING: DO NOT OVERFUSE**
- 4. It is recommended that if you are using **XPin™** LED displays, you do not install the indicated High Voltage fuse as it is no longer needed.
- 5. Replace the Fuse Legend insert into the cardholder with YOUR game's required Fuses facing forward. Remove the Adhesive backing from the cardholder and attach at the location provided on the circuit board.
- 6. Install the XP-WMS8345 into the back box.
- 7. Connect all connectors as indicated. **NOTE:** Early WMS System 3-6 games will not have connections for 3J12, 3J10, J1, or the GI pig tail cable. The GI fuse also will not be needed in these games.
- 8. Double-check all connections, plug in the machine, and turn the game on. The LEDs will light up.
- 9. PLAY PINBALL! You'll enjoy your **XPin™** displays for years to come!



Installation

XPinPinball.com

tech@XPinPinball.com