

XP-3179-S v. 2.1b


Installation

XP-WMS8363-Shuffle

— **Installation Time:** About 20 minutes

— **Tools Required:** 1/4" Nut-driver, Phillips screwdriver

1. Unplug the AC power from your pinball machine. Remove game backglass. Unplug all display board connecting cables and remove the original display driver board and score displays.
2. Replace the display with your new **XPin™** XP-WMS8363 and score displays.
3. It is recommended that you remove the High Voltage fuse from your power supply, as it is no longer needed.
4. If not already in place, attach the Foam Light-Blocks on their respective LED displays.
5. The optional grey vinyl is easily installed at this time.
6. Connect edge connector and provided ribbon cables to the appropriate displays. Please make note of proper pin one orientation when connecting the ribbon cables. New ribbon cables are available from the Accessories page.
7. Double-check all connections, plug in the machine, and turn the game on. The LEDs will light up. Pressing the **TEST** pushbutton on the XP-WMS8363 board will illuminate all segments of all displays. This indicates that all boards and cables in the **XPin™** System are operating correctly. Use the thumbwheel **BRIGHTNESS** control on the board to set your preferred illumination level.
8. PLAY PINBALL! You'll enjoy your **XPin™** displays for years to come!

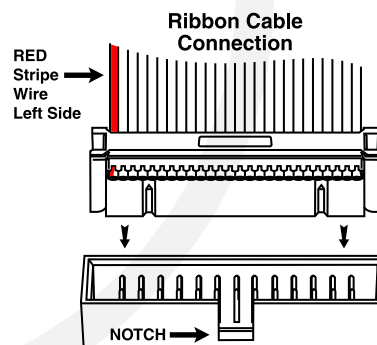

.....
EVOLUTION * EVOLVED.
.....

Installation

XPinPinball.com

tech@XPinPinball.com