

XP-3179-S v. 2.1b

Installation

XP-WPCDMD-CTRL

- Installation Time: About 20 Minutes
- Tools Required: 1/4" Nut-driver, Phillips screwdriver
- 1. Unplug the AC power from your pinball machine. Remove game backglass. Open back box.
- 2. Remove OEM WPC DMD Controller board
- 3. Install the XP-WPCDMD-CTRL in the back box
- 4. Connect all connectors as indicated. Make sure to connect all ribbon cables with proper Pin 1 orientation
- 5. Double-check all connections, plug in the machine, and turn the game on.
- 6. All systems should be operational! Play on!

Dip SW 1	Dip SW 2	Function
OFF	OFF	Normal Operation for Plasma Displays
OFF	ON	2x Scan Rate
ON	OFF	3x Scan Rate
ON	ON	4 x Scan Rate
Dip SW 3	OFF	Reserved
	ON	Reserved
Dip SW 4	OFF	Debug Mode. Push SW2 to cycle through Test Screens
	ON	Normal Operation (Game Mode)



