



---

## Installation

### XP-GTLB4

■ **Installation Time:** About 5 minutes

■ **Tools Required:** None

1. Unplug the AC power from your pinball machine. Remove game back glass or playfield glass if the display is located in the apron.
2. If Ball/Credit display is located in the apron, remove the apron.
3. Remove OEM Display from game.
4. Prior to installing the display, verify fit of the light gasket and apply the appropriate colored vinyl film to the display.
5. Install XP-GTLB4 display.
6. Plug AC Power and turn game on.
7. Adjust display to the desired brightness
8. Re-Install back glass or apron and playfield glass.
9. All systems should be operational! Play on!

