



Installation

XP-WPCHV

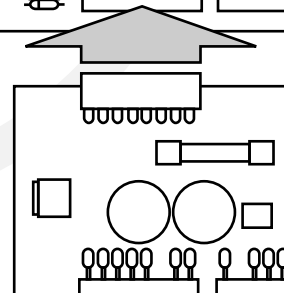

A-14039 Dot Matrix Controller Board

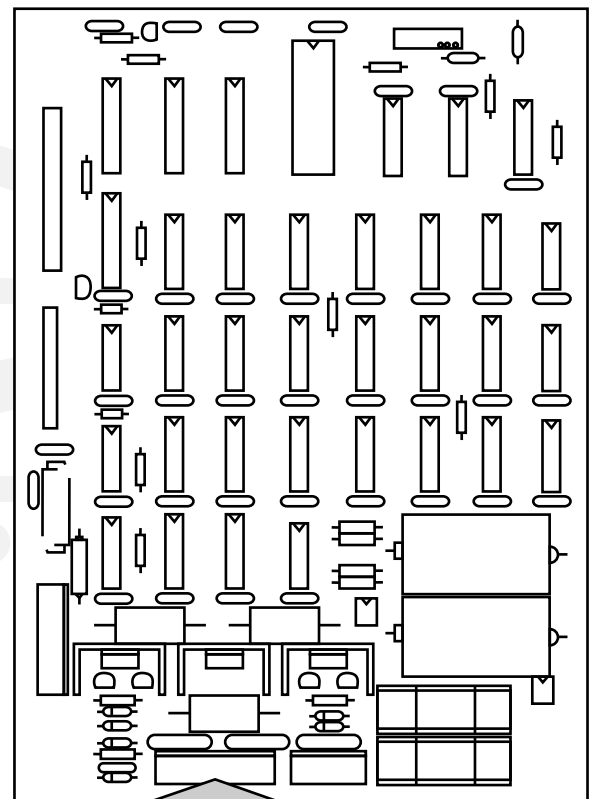

XP-WPCHV

- **Installation Time:** About 5 minutes, depending on game
- **Tools Required:** None
- 1. Unplug the AC power from your pinball machine. Remove game backglass.
- 2. Disconnect connections at J604 and J605 from the D-14039 DMD controller board.
- 3. Remove Fuses F601 and F602 from the D-14039 DMD controller board.
- 4. Install the MDL 0.5A fuse (1/2 Amp Slow Blow Fuse) onto the XP-WPCHV board.
- 5. Install the XP-WPCHV board on the same connections J604 and J605.
- 6. Install the associated cables for J604 and J605 on the XP-WPCHV board.
- 7. Replace backglass.
- 8. PLAY PINBALL!



EVOLUTION * EVOLVED.

Installation